



## MRR-4SPA – Wireless Remote

- For use with poly-planar marine systems
- Floating, waterproof design – do not remove remote from rubber housing
- Usage range 15' (5m)

## CONTROL & FUNCTIONS KEYS

**Power button** - Powers on and off the unit.

**MUTE button** - Mutes the audio.

**TUNE ▲/▼ buttons** - Tunes Radio frequencies or changes tracks higher/lower. Press and hold to manually tune or fast forward a song track.

**Source button** - to cycle through all available sources connected to the system (e.g. RADIO mode to CD mode to AUX IN).

**Auto button** - In radio mode, seeks through the current 6 presets. Press and hold to automatically program the presets with the next detected stations.

**Audio button** - Pressing this button will cycle through the audio functions of the unit. Use the Volume knob to adjust the function up, down or On/Off. The functions vary slightly between products. After waiting 3 seconds, the radio will exit the menu.

**Band button** - In radio mode, to select between 3FM banks and 2AM banks.

**VOL ▲/▼ buttons** - to increase/decrease volume level.

**Preset 1 button** - In radio mode, Press and hold to assign the current station to this preset. In CD mode, enables INTRO scan function.

**Preset 2 button** - In radio mode, Press and hold to assign the current station to this preset. In CD mode, enables RANDOM scan function.

**Preset 3 button** - In radio mode, Press and hold to assign the current station to this preset. In CD mode, enables REPEAT track function.

**Preset 4 button** - In radio mode, Press and hold to assign the current station to this preset.

**Preset 5 button** - In radio mode, Press and hold to assign the current station to this preset. In CD changer mode, load and play the previous Disc.

**Preset 6 button** - In radio mode, Press and hold to assign the current station to this preset. In CD changer mode, load and play the next Disc.

**Note:** *Spa Control buttons below are optional and the spa must be capable and equipped with the SPA CONTROLLER INTERFACE. (available exclusively from Poly-planar).*

**A ↔ B Speaker button** – Spa control button, for STi120 only (see applicable user manual for details)

**SPA-X1 button** – Spa control button, reserve for Spa/Jet pump use (see applicable user manual for details)

**SPA-X2 button** – Spa control button, reserve for Spa/Jet pump use (see applicable user manual for details)

**Light button** – Spa control button, controls the spa lighting system (see applicable user manual for details)

**Air button** – Spa control button, controls the air blower pump (see applicable user manual for details)

**Jet 1 button** – Spa control button, controls the main spa jet pump (see applicable user manual for details)

**Jet 2 button** – Spa control button, controls the second spa jet pump (see applicable user manual for details)

**Jet 3 button** – Spa control button, controls the third spa jet pump (see applicable user manual for details)

## **Battery Installation**

- Use battery type CR2032
- Remove remote from rubber housing
- Put a coin in the battery door slot and turn counter-clockwise
- Hook with thumbnail and pull out battery door
- Replace with fresh battery, be sure to note polarity
- Replace door. Use a coin in the slot and turn clockwise
- Replace remote firmly in rubber housing

***poly-planar, inc.***

Maryland USA

(410) 761-4000

[www.polyplanar.com](http://www.polyplanar.com)