



MRR 2 – Wireless Remote

- For use with poly-planar marine systems
- Floating, waterproof design – do not remove remote from rubber housing
- Usage range 15' (5m)

CONTROL & FUNCTIONS KEYS

Power button - to turn the unit on or off.

MUTE button - to mute audio level. Press the button again to release mute function.

TUNE ▲/▼ buttons - In radio mode, to select a station In CD mode, to move to the next/previous track.

Source button - to cycle through all available sources connected to the system (e.g. RADIO mode to CD mode to AUX IN).

Auto button - In radio mode, seeks through the current 6 presets. Press and hold to automatically program the presets with the next detected stations.

Audio button - to select the audio adjustment functions on the stereo



Band button - In radio mode, to select between 3FM banks and 2AM banks.

VOL ▲/▼ buttons - Zone1, to increase/decrease volume level. Zone1, reserve for future use

Preset 1 button - In radio mode, Press and hold to assign the current station to this preset. In CD mode, enables INTRO scan function.

Preset 2 button - In radio mode, Press and hold to assign the current station to this preset. In CD mode, enables RANDOM scan function.

Preset 3 button - In radio mode, Press and hold to assign the current station to this preset. In CD mode, enables REPEAT track function.

Preset 4 button - In radio mode, Press and hold to assign the current station to this preset.

Preset 5 button - In radio mode, Press and hold to assign the current station to this preset. In CD changer mode, load and play the previous Disc .

Preset 6 button - In radio mode, Press and hold to assign the current station to this preset. In CD changer mode, load and play the next Disc.

Battery Installation

- Use battery type CR2025
- Remove remote from rubber housing
- Put a coin in the battery door slot and turn counter-clockwise
- Hook with thumbnail and pull out battery door
- Replace with fresh battery, be sure to note polarity
- Replace door. Use a coin in the slot and turn clockwise
- Replace remote firmly in rubber housing

WARRANTY INFORMATION

This unit is warranted to be free of defects in material and workmanship for a period of two year. Warranty is subject to proper installation and operation within the published specifications. Except as provided below, Poly Planar will repair or replace, at its discretion, any product returned prepaid to our facility and determined to be defective. Poly Planar is not liable for consequential damages

LIMITS OF LIABILITY

Poly Planar warranty does not cover damage occurred in transit, accident, abuse, misuse, negligence, fire, flood, lightning or unauthorized service. This warranty assumes no responsibility for damages incurred during installation of this equipment. This warranty covers normal consumer use only. In no event shall Poly Planar be liable for special, incidental, or consequential damages.

To obtain service under this warranty, please call Poly-Planar for a RETURN AUTHORIZATION NUMBER.

poly-planar, inc.

Maryland USA

(410) 761-4000

www.polyplanar.com