


MA206 Round Speaker Installation Guide

Cutout and use as template for drilling

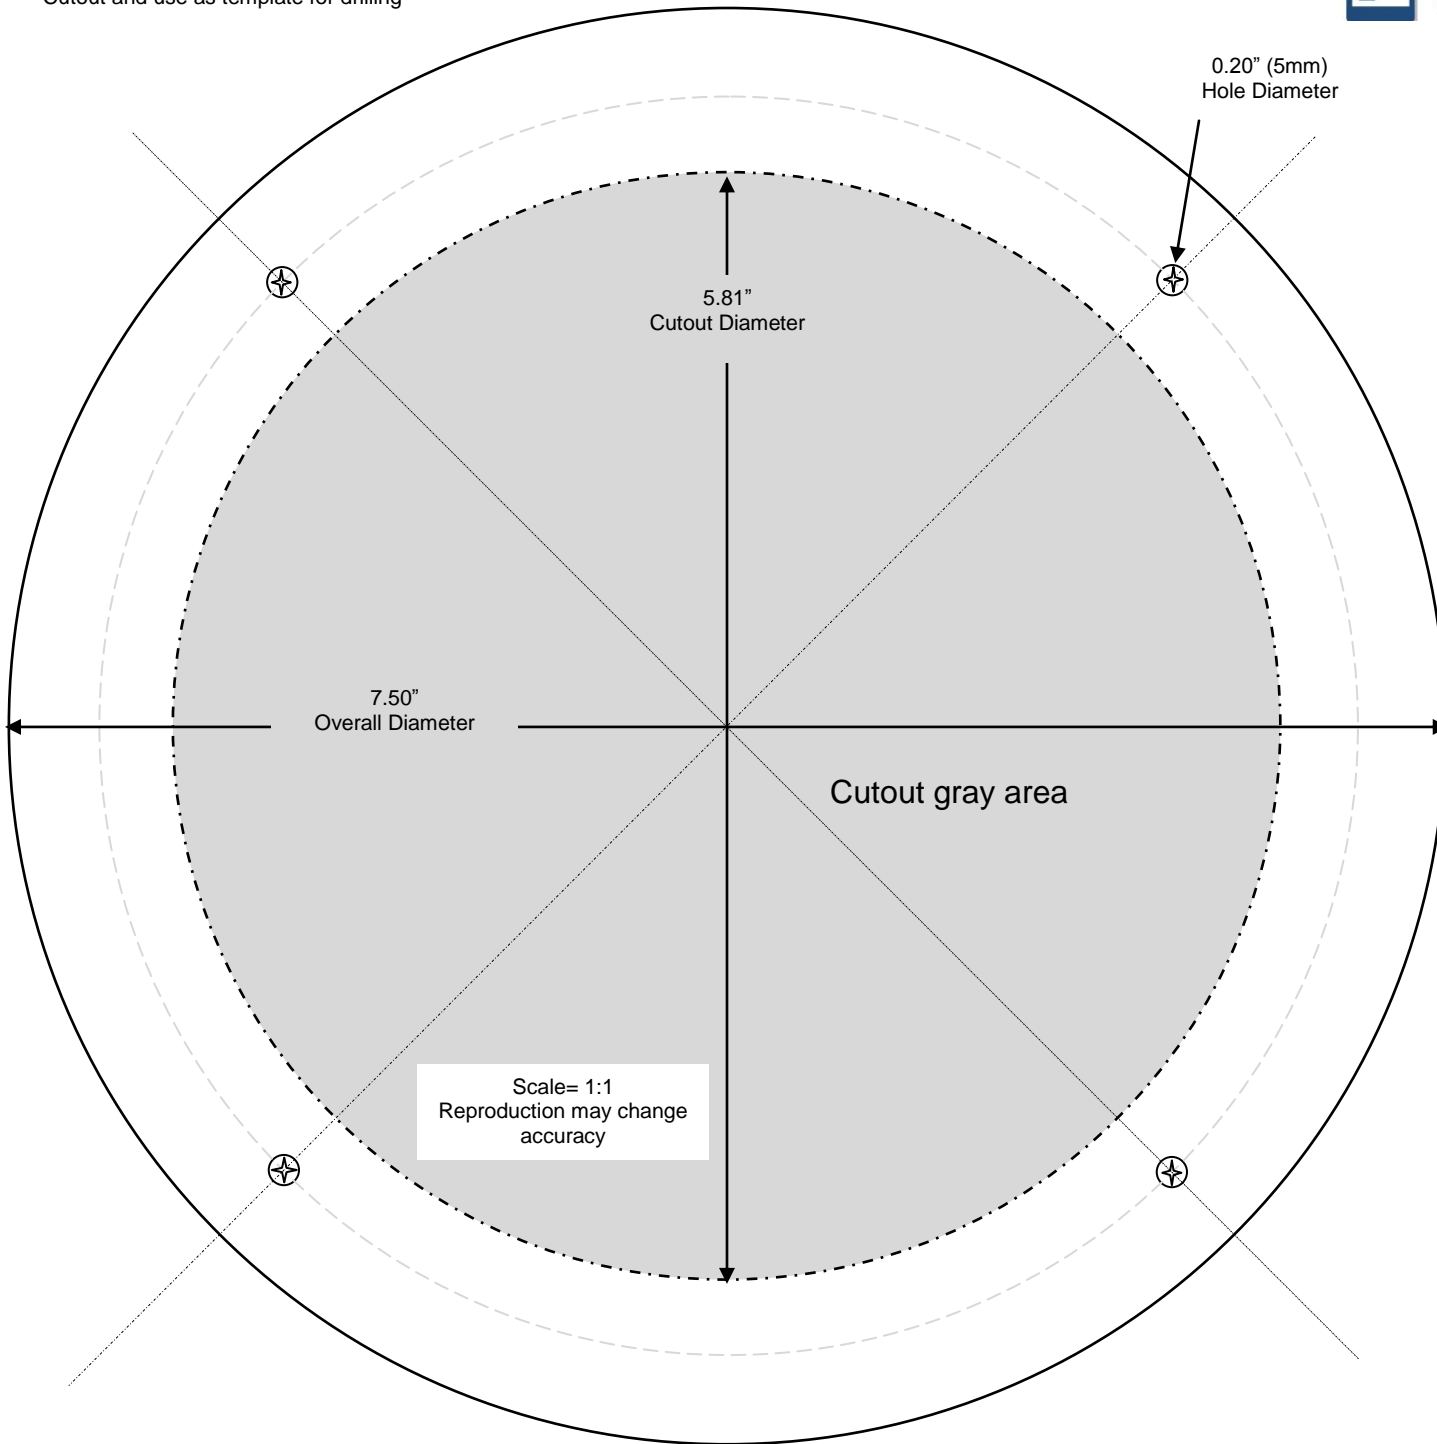

Installation: Find a suitable location making sure there is clearance for the installed depth. Use a hole saw or other suitable device to make a cutout.

Place the speaker in the cutout and mark and drill holes for the mounting screws (supplied). If the panel is too thin or soft for screws use the stainless screw clips in the hardware kit.

Attach speaker wires supplied, solid color wire to positive (red dot or with + sign or larger tab as shown on the diagram).

